



Kestrel Wind & Pocket Weather Meter






www.turf-tec.com

(800) 258-7477

The table below shows all Measurement screens available, listed with their corresponding screen icon and "Hint" abbreviation.

Measurement	lcon	Hint	Units of Measure	1000
Wind Speed	<;}	SPd	mph   kt   B   m/s   ft/min   km/h	•
Temperature	ı	dEG	°F   °C	•
Wind Chill	<b>⊹</b> 1	chill	°F   °C	•
Relative Humidity	<b>\$</b> %	r.h.	%	•
Heat Stress Index	<b>\$</b> %₌	H.I	°F   °C	•
Dewpoint Temp	<b>\$</b>	d.P.	°F   °C	•
Barometric Pressure	1	bAro	inHg   hPA   mb	•
Altitude	<b>*</b>	Alt	m   ft	•
Wet Bulb Temp	<b>61</b>	bulb	°F °C	•
Backlit Display				•
Pressure Trend	<b>→</b>			•
Delta T	ı	dElt		
Clock				•

# **GETTING TO KNOW YOUR KESTREL**

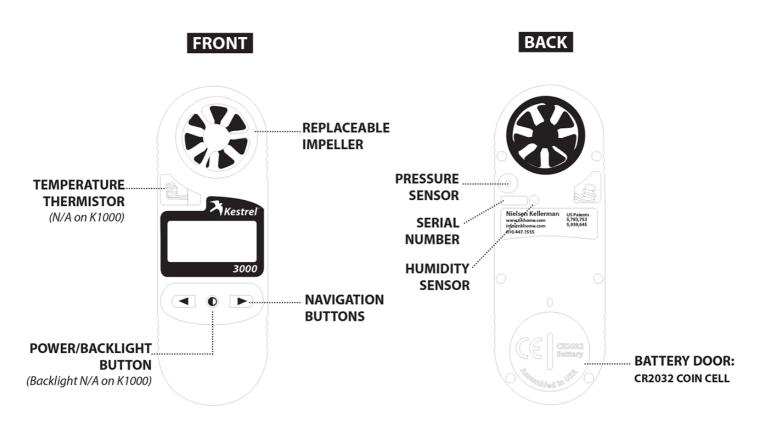

#### **GETTING STARTED**

## **Turning ON and OFF**

- Press to turn on.
- Hold for 3 seconds to turn off.

 
□ The Kestrel Meter will automatically turn off if no buttons have been pressed for 45 minutes.

#### **Select Measurement Mode**

- The instantaneous Measurement value will be displayed on each screen and updated once per second.

□ Each Measurement screen will flash a brief "Hint" to clarify which Measurement is being displayed. Note: Hints are not displayed in the Kestrel 1000.

The Measurement's icons and units of measure will be displayed in the lower line of the screen.



#### **SETUP + OPTIONS**

#### Select the Unit of Measure

Select the unit of measure. While holding ♥, press ► to scroll through the available units of measure for that measurement.

## **Adjust the Clock**

\*This applies to the 2500, 2500NV, 3500, 3500NV and 3500DT.

## **BAROMETRIC PRESSURE & ALTITUDE ADJUSTMENT**

# SETTING REFERENCE BAROMETRIC PRESSURE & ALTITUDE: KESTREL 2500 & KESTREL 3500 ONLY

□ The Kestrel Meter measures "station pressure," which changes in response to both changes in altitude and changes in atmosphere. Barometric pressure is a measurement of the air pressure adjusted to sea level. To obtain accurate barometric pressure and altitude readings, you must first enter EITHER your location's current barometric pressure OR your current altitude.

\*Station pressure is displayed if the reference altitude is set to zero.

## Starting with Known Altitude for your Location

- Use **◄** or **▶** to highlight the "BARO" screen.
- Press 
  ¬ and simultaneously until the word "REF" starts blinking on screen.
- Use 
  or 
  or l
  to adjust the value to the correct known Altitude.
- Press and simultaneously to exit the reference setting mode.

□ After the Altitude reference is set, place the unit on a table and allow it to stabilize. The accurate Barometric Pressure reading will then be displayed on screen.

## **MEASUREMENT NOTES**

# MEASUREMENTS

#### **Barometric Pressure Trend**

- $\uparrow$ : indicates pressure is rising quickly (> +0.18 inHg) in 3 hours
- →: indicates pressure is rising (within +0.06 and +0.18 in Hg)
- →: indicates pressure is stable (remains between -0.06 and +0.06 inHg)
- $\searrow$ : indicates pressure is dropping (within -0.06 and -0.18 in Hg)
- ↓: indicates pressure is falling quickly (>-0.18 inHg)

#### **Select Units of Measure**

- Use or to scroll to the desired Measurement screen.

## **Water and Snow Temperature**

The Kestrel Meter may also be used to measure the temperature of water and snow. Submerge the thermistor portion (curly exposed wire in window next to impeller) in water or snow to get an accurate reading. Kestrel Meters are completely waterproof, float and can be safely submerged in water according to IP-67 standards (up to 1 meter for a maximum of 30 minutes).

## Max/Avg Function

To view the maximum wind gust recorded, press or until you see "MAX" appear at bottom of screen. Press again to view average wind gust. "AVG" will appear at bottom of screen. Both Max and Average are reset each time the unit is powered down. To restart averaging, simply turn the unit off and back on again.

#### **Hold Mode**

 $\Box$  Hold Mode can be useful for taking measurements when you are unable to view the display.

- Hold down , then press ■.
- The word "HOLD" will blink on each screen and all values will stop measuring and freeze in memory.
- Use or to view each Measurement screen in Hold Mode.
- To exit Hold Mode, hold down •, then press again.

## **Backlight\***

- Press 
  o to activate the backlight for 10 seconds.
- Press o again to manually deactivate the backlight before 10 seconds expire.

## **MAINTENANCE & SERVICE ADDENDUM**

#### Replacing the Battery

When your display becomes dim or disappears, you need to change the battery.

Use a US nickel or similar coin to twist open the battery compartment.


Replace battery with a new, clean CR2032 coin-cell battery, with positive side (+) facing up.

Page 3

<sup>\*</sup>The Kestrel 1000 Meter does NOT offer a backlight.

Replace battery with a new, clean CR2032 coin-cell battery, with positive side (+) facing up. CR2032 batteries are available in most stores that sell batteries.

 $\square$  When replacing the battery door, be sure to keep the black rubber o-ring seated in the groove on the case back.

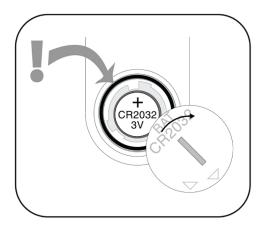

## **SENSOR CALIBRATION**

#### **Impeller**

The Kestrel impeller calibration drift is less than 1% after 100 hours of use at 16 MPH | 7 m/s. Drift increases with higher-speed use. For most users, the impeller will provide accurate wind speed/air flow readings for years if not physically damaged. However, if your application requires extremely high precision or if you perform frequent high-speed readings, we recommend you replace your impeller at one-year intervals. Every replacement impeller is supplied with a certificate of conformity and restores your Kestrel's calibration upon installation.

#### **Temperature Sensor (Kestrel 2000 and higher)**

The Kestrel temperature sensor exhibits virtually zero drift over time and generally does not require recalibration for accurate performance during the life of the product. If your industry or application requires calibration, please contact NK or a certified calibration lab for options and pricing.

## **Humidity Sensor (Kestrel 3000 and higher)**

The Kestrel humidity sensor calibration drift may be up to +/- 2% over 24 months. For high-precision applications, we recommend recalibration at 24-month intervals. If you require calibration, please contact NK or a certified calibration lab for options and pricing. The humidity sensor may also be recalibrated in the field using a Kestrel Humidity Calibration Kit (NK PN-0802). Instructions for running the recalibration routine are provided with the Humidity Calibration Kit and may also be found at www.kestrelinstruments.com/mwdownloads/download/link/id/37/

#### **Pressure Sensor**

The Kestrel pressure sensor drift may be up to 1 mbar over 12 months. For high-precision applications, we recommend recalibration at 12-month intervals. If you require calibration, please contact NK or a certified calibration lab for options and pricing. The pressure sensor may also be recalibrated in the field with reference to a known-accurate and calibrated pressure standard. We do not recommend simply recalibrating to a local weather station as this may not be accurate for your location. Instructions for recalibrating the pressure sensor may be found at www.kestrelinstruments.com/category-service-calibration/kestrel-calibration.

#### **MAINTENANCE & SERVICE ADDENDUM**

#### **Replacing the Battery**


When your display becomes dim or disappears, you need to change the battery.

Use a US nickel or similar coin to twist open the battery compartment.

Replace battery with a new, clean CR2032 coin-cell battery, with positive side (+) facing up.

CR2032 batteries are available in most stores that sell batteries.

□ When replacing the battery door, be sure to keep the black rubber o-ring seated in the groove on the case back.

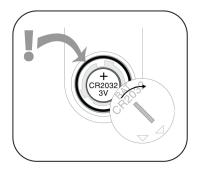

## **SENSOR CALIBRATION**

#### **Impeller**

The Kestrel impeller calibration drift is less than 1% after 100 hours of use at 16 MPH | 7 m/s. Drift increases with higher-speed use. For most users, the impeller will provide accurate wind speed/air flow readings for years if not physically damaged. However, if your application requires extremely high precision or if you perform frequent high-speed readings, we recommend you replace your impeller at one-year intervals. Every replacement impeller is supplied with a certificate of conformity and restores your Kestrel's calibration upon installation.

#### **Temperature Sensor**

The Kestrel temperature sensor exhibits virtually zero drift over time and generally does not require recalibration for accurate performance during the life of the product. If your industry or application requires calibration, please contact NK or a certified calibration lab for options and pricing.

## **Humidity Sensor (Kestrel 3000 and higher)**

The Kestrel humidity sensor calibration drift may be up to +/- 2% over 24 months. For high-precision applications, we recommend recalibration at 24-month intervals. If you require calibration, please contact NK or a certified calibration lab for options and pricing. The humidity sensor may also be recalibrated in the field using a Kestrel Humidity Calibration Kit (NK PN-0802). Instructions for running the recalibration routine are provided with the Humidity Calibration Kit and may also be found at www.kestrelinstruments.com/mwdownloads/download/link/id/37/

#### Pressure Sensor (Kestrel 2500 & 3500)

The Kestrel pressure sensor drift may be up to 1 mbar over 12 months. For high-precision applications, we recommend recalibration at 12-month intervals. If you require calibration, please contact NK or a certified calibration lab for options and pricing. The pressure sensor may also be recalibrated in the field with reference to a known-accurate and calibrated pressure standard. We do not recommend simply recalibrating to a local weather station as this may not be accurate for your location. Instructions for recalibrating the pressure sensor may be found at www.kestrelinstruments.com/category-service-calibration/kestrel-calibration.

## **SENSOR CALIBRATION**

## Impeller

The Kestrel impeller calibration drift is less than 1% after 100 hours of use at 16 MPH | 7 m/s. Drift increases with higher-speed use. For most users, the impeller will provide accurate wind speed/air flow readings for years if not physically damaged. However, if your application requires extremely high precision or if you perform frequent high-speed readings, we recommend you replace your impeller at one-year intervals. Every replacement impeller is supplied with a certificate of conformity and restores your Kestrel's calibration upon installation.

#### Temperature Sensor (Kestrel 2000 and higher)

The Kestrel temperature sensor exhibits virtually zero drift over time and generally does not require recalibration for accurate performance during the life of the product. If your industry or application requires calibration, please contact NK or a certified calibration lab for options and pricing.

## **Humidity Sensor (Kestrel 3000 and higher)**

The Kestrel humidity sensor calibration drift may be up to +/- 2% over 24 months. For high-precision applications, we recommend recalibration at 24-month intervals. If you require calibration, please contact NK or a certified calibration lab for options and pricing. The humidity sensor may also be recalibrated in the field using a Kestrel Humidity Calibration Kit (NK PN-0802). Instructions for running the recalibration routine are provided with the Humidity Calibration Kit and may also be found at www.kestrelinstruments.com/mwdownloads/download/link/id/37/

## Pressure Sensor (Kestrel 2500 & 3500)

The Kestrel pressure sensor drift may be up to 1 mbar over 12 months. For high-precision applications, we recommend recalibration at 12-month intervals. If you require calibration, please contact NK or a certified calibration lab for options and pricing. The pressure sensor may also be recalibrated in the field with reference to a known-accurate and calibrated pressure standard. We do not recommend simply recalibrating to a local weather station as this may not be accurate for your location. Instructions for recalibrating the pressure sensor may be found at www.kestrelinstruments.com/category-service-calibration/kestrel-calibration.

# **5 YEAR LIMITED WARRANTY**

Your Kestrel instrument is warrantied to be free of defects in materials and workmanship for a period of FIVE YEARS from the date of its first consumer purchase. NK will repair or replace any defective product or part when notified within the warranty period, and will return the product via domestic ground shipping or NK's choice of method of international shipping at no charge. The following are excluded from warranty coverage: damage due to improper use, storage, maintenance or handling (including corrosion); damage caused by severe or excessive impact, damage caused by failed or leaking batteries, crushing or mechanical harm; modifications or attempted repairs by someone other than an authorized NK repair agent; impeller failure not caused by a manufacturing defect; normal usage wear and failed batteries. Measurement accuracy is warranted to be within the specifications on the supplied Certificate of Conformity including specified drift since date of manufacture. If no warranty registration or proof of purchase is provided, the warranty period will be measured from the product's date of manufacture.

Except for the warranties set forth herein, NK disclaims all other warranties, expressed, implied or statutory, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose. Any implied warranties that may be imposed by applicable law are limited to the term of this warranty. In no event shall NK be liable for any incidental, special or consequential damages, including, but not limited to, loss of business, loss of profits, loss of data or use, whether in an action in contract or tort or based on a warranty, arising out of or in connection with the use or recalibration, performance of an NK product, even if NK has been advised of the possibility of such damages. You agree that repair, and (upon availability) replacement, as applicable, is your sole and exclusive remedy with respect to any breach of the NK Limited Warranty

All product liability and warranty options are governed exclusively by the laws of the Commonwealth of Pennsylvania.

Please register your Kestrel instrument at www.kestrelinstruments.com

turf-tec nternational

www.turf-tec.com (800) 258-7477