




## DONUT TRIMMER EDGING BLADES

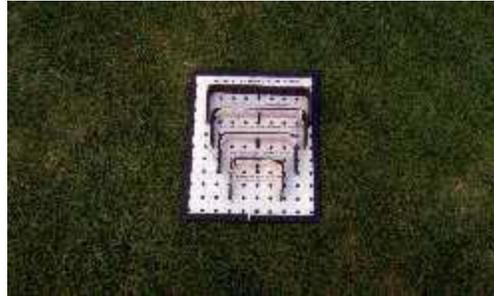

The DonutTrimmer is U-shaped rotary edging blade specially designed for use on most commercial weeders. This edging blade easily trims around sprinkler heads, yardage markers and storm drains as well as edging cartpaths, railroad ties and bunkers in minutes.

The blades come in two different sizes: 7" and 8" diameters. By selecting the proper size blade, you can perform trimming tasks that most other trimmers find impossible. The ease of operation allows superintendents and greenskeepers to maintain a well tailored golf course at a very reduced labor cost.

The DonutTrimmer Edging Blade is used to detail many of the tour event courses From Augusta, Georgia to Pebble Beach, California.

DTB7-M	Seven Inch Blades	The most versatile blade. When tipped at a 45 degree angle. It can edge an area from 6" to 60" diameters. Excellent for sprinkler heads, valve boxes, yardage markers and it can be used vertically to edge bunkers, cart paths, railroad ties or any other special applications.
DTB8-M	Eight Inch Blades	These blades will drop over the Toro 650/670 Series and other similar sprinkler heads.


# DonuTTrimer Edging Blades Installation Instructions

Please read the following for safe and accurate operation of the Rotary Edging Blades.

## DonuTTrimmer Blade Installation Instructions

1. DO NOT EXCEED 4000 RPMs OR 1/2 THROTTLE APPLICATION, WHICHEVER IS LESS. SEE ENGINE MANUFACTURER'S SPECIFICATIONS FOR OPERATING SPEEDS. OPERATING AT HIGHER RPMs CAN CAUSE VIBRATION, LOSS OF EDGING ABILITY AND POSSIBLE PERSONAL INJURY.
2. CANNOT be used on curved shaft or handlebar-type trimmers.
3. **INSTALL POSITIVE STOP** around handle, under the throttle trigger. (See Figures 2 and 3 on back) This will prevent engine from exceeding full throttle. (To ensure proper operation, you are required to purchase this throttle control device
4. Read and understand all safety warnings on this installation sheet and on the label attached to the cutter blade before using.
5. Always wear safety glasses or other suitable eye protection and hearing protection.
6. Remove existing trimmer head, or worn or damaged DT 9700 Series Edging Blade from machine shaft.
7. Confirm that the machine is equipped with protective shield. If not, **DO NOT** install replacement cutter blade until Protective Shield has been obtained and installed. (Universal shield available
8. With protective shield in place on machine shaft, attach the DT9700 Series Edging Blade and RM9790 Support Plate. The support plate should be placed on the top surface of the cutting blade on the side opposite of the attachment nut or bolt head. See Figure 1. (Remove "knock out" for 10mm bolt).
9. Tighten blade with proper tools in accordance with the machine manufacturer's specifications.
10. Do not operate if trimmer is vibrating. Operating the engine with a damaged or out of balance blade can cause loss of cutting ability and possible personal injury.
11. Replace this blade only with DT9700 Series Edging Blade.

## Assembly Detail of DT9700 Series Edging Blade

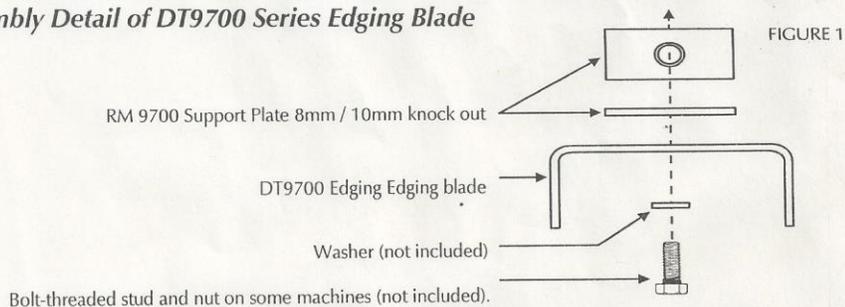

# Turf-Tec International

1471 CAPITAL CIRCLE NW • SUITE 13 • TALLAHASSEE, FL 32303 • (850) 580-4026 • (800) 258-7477 • FAX (850) 580-4027 • www.turf-tec.com

## *Sprinkler Heads, Valve Boxes, Yardage Markers, etc.*


1. **DO NOT EXCEED MORE THAN 1/2 THROTTLE! (Install Positive Stop, See Figures 2 and 3).**
2. Loosen and move the Safety Guard up the shaft towards the handle, approximately 3", and tighten securely. This will allow the Trimmer to lower over the sprinkler head.
3. Always wear safety glasses or other suitable eye protection, and hearing protection.
4. Tip blade at a 45 degree angle using the object's outside edge as a guide with operator walking 360.
5. Only cut using one edge of the rotary blade.

## *Bunkers, Cartpaths, Railroad Ties, etc.*

1. **DO NOT EXCEED MORE THAN 1/2 THROTTLE! (Install Positive Stop, See Figures 2 and 3).**
2. Always wear safety glasses or other suitable eye protection, and hearing protection.
3. Keep trimmer at its normal operating angle.
4. Stand in front of object to be edged or detailed. (Must stand inside bunker).
5. Operator must walk counter clockwise (left) while feeding the blade into object's edge.
6. Depth of edge is controlled by the operator.

## *Assembly Detail of Positive Stop*

The Positive Stop can be installed in two positions depending on the model and style of the trimmer it will be used

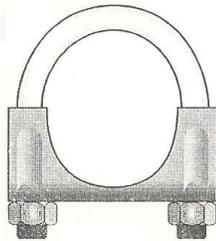

108.DT9701 Positive Stop

### HORIZONTAL

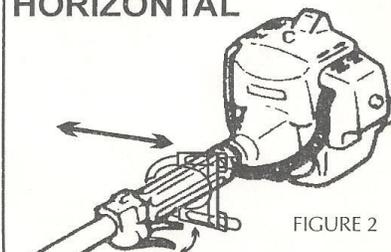


FIGURE 2

### VERTICAL

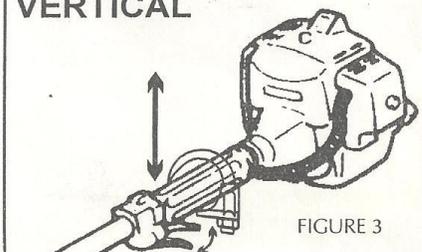


FIGURE 3

**LIMITED WARRANTY OF TURF-TEC INTERNATIONAL PRODUCTS**

Turfgrass Products Corporation - dba - Turf-Tec International ("Seller") warrants to the final purchaser, that all Turf-Tec International tools will be free from defects in material or workmanship for a period of one year from date of purchase. SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the repair or replacement of parts, without charge, which are defective in material or workmanship and which have not been misused, carelessly handled, or improperly repaired by persons other than Turf-Tec International. To make a claim under this Limited Warranty, you must return the complete tool, transportation prepaid, to Turf-Tec International after contacting Turf-Tec International and receiving a return authorization number. Please include a dated proof of purchase with your tool.

ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT.

**Hold Harmless Agreement**

The seller shall protect, defend, indemnify and hold the purchaser and their respective assigns and their attorneys, accountants, employees, officers and directors harmless from and against all losses, costs, liabilities, claims, damages and expenses of every kind and character, as incurred, resulting from or relating to or arising out of the inaccuracy of results, injury of user, injury of sports participant, turfgrass loss, warranty, covenant or any agreement made by the seller in this agreement.