


Economy Infill Depth Gauge Instructions

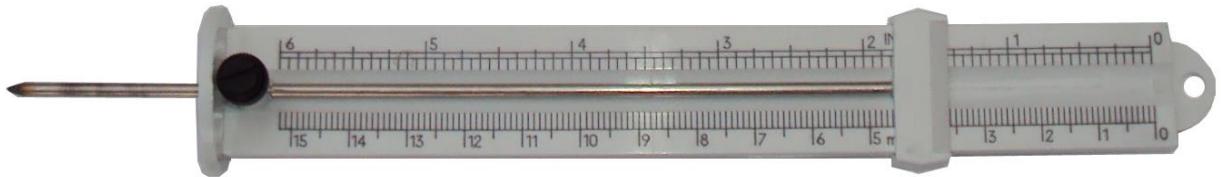

Economy Model Infill Depth Gauge - IDG2-M
Measures from 0 to 6 inches or 0 to 15 cm
High impact Plastic and Stainless-Steel Probe
Weight - 1.0 oz

Instructions

1. Turn black knob to loosen depth gauge
2. Place white foot plate firmly on infill surface
3. Slide center shaft down until it makes contact with carpet backing
4. Lift out and read gauge in inches or millimeters
5. Note - you should check three areas at each location to get the average infill for that test area
6. An average of 10 test areas per field should be tested
7. Test wear areas more frequently as these areas are usually where the infill is dispersed more frequently
8. Typically, around 68 - 70% of pile height should be covered by infill. Please check with your particular manufacturer for their exact recommendations. A height of cut prism gauge is also useful for determining the amount of pile height above the infill.

Also keep in mind that infill does not break down, its often just re-distributed to other areas of the playing surface. Proper grooming may even out the infill better than the addition of more infill.

IDG2-M - Economy Infill Depth Gauge

LIMITED WARRANTY OF TURF-TEC INTERNATIONAL PRODUCTS

Turfgrass Products Corporation - dba - Turf-Tec International ("Seller") warrants to the final purchaser, that all Turf-Tec International tools will be free from defects in material or workmanship for a period of one year from date of purchase. SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the repair or replacement of parts, without charge, which are defective in material or workmanship and which have not been misused, carelessly handled, or improperly repaired by persons other than Turf-Tec International. To make a claim under this Limited Warranty, you must return the complete tool, transportation prepaid, to Turf-Tec International after contacting Turf-Tec International and receiving a return authorization number. Please include a dated proof of purchase with your tool.

ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT.

Hold Harmless Agreement

The seller shall protect, defend, indemnify and hold the purchaser and their respective assigns and their attorneys, accountants, employees, officers and directors harmless from and against all losses, costs, liabilities, claims, damages and expenses of every kind and character, as incurred, resulting from or relating to or arising out of the inaccuracy of results, injury of user, injury of sports participant, turfgrass loss, warranty, covenant or any agreement made by the seller in this agreement.