


**Milona Hex Plugger 7 inch model x 2 inch or 3 inch Deep  
PLUG-HEX-7IN-(2 or 3")-M**



Turf-Tec International is proud to introduce the Milona 7 Inch Hexagon Turf Plugger that has revolutionized turf repair. This handy tool eliminates gaps that occur when using a round turf plugger which will greatly reduce repair time. This innovative tool will make it easy to remove and replace sod and soil, while the six-sided plugs line up squarely for seamless turf repair. The hexagon shape causes the plugs in the repaired area to interlock and remain in place even on sloped areas. The Milona 7 Inch Hexagon Turf Plugger is excellent in the removal of invasive weeds as well. This tool will cut a hexagon shaped piece of turf grass 7 inches across and to a depth of 2 or 3 inches. Several of the cut segments (plugs) will stack within the body of the repair tool. The bottom of the cut segment can be trimmed or scalped to ensure level replacement of turf. The hexagons can be linked into a honeycomb shaped pattern to cover larger areas. The recovery of the new plugs is quick and effective. This Milona 7 Inch Hexagon Turf Plugger is made of solid galvanized steel allowing for optimum performance and durability.

<p>Each unit includes a trowel allowing for uniform plug depth.</p>	<p>Repaired with the Milton 7 Inch Hexagon Turf Plugger.</p>	<p>Repair attempted with hole cutter or round turf plugger.</p>

**Milona Hex Plugger 7 inch model x 2 inch or 3 inch Deep  
PLUG-HEX-7IN-(2 or 3")-M**

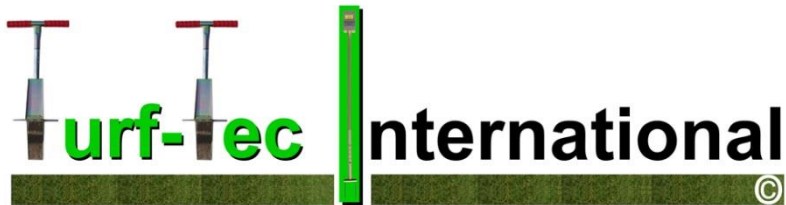

## Miltona Hex Plugger 7 inch model x 2 inch or 3 inch Deep Instructions

1. **Keep cutting edge sharp! Touch up the factory edge before you start.**  
**Keep bevel on the inside!**
2. **Start by filling plugger with “good” plugs from your turf nursery. Step plugger into turf by using sufficient force with both feet on plugger foot bars. Push cutting blade all the way down into soil until foot bars rest on turf.**
3. **After each plug is cut, tip plugger on its side. Use the cut off trowel to slice off excess dirt that protrudes below cutting blade. Be sure this soil falls back into the plug hole. This procedure will result in uniform depths.**
4. **When the storage sleeve is full of plugs, transport plugger to the area being repaired. Do not remove “good” plugs from sleeve area. As you follow steps 1 & 2 to remove damaged plugs, the “good” plugs are forced upward in the sleeve area. Simply remove the top “good” plug and place it in the damaged plug hole. Following these steps will ensure uniform plug depth.**
5. **When repairing small area, plugs will blend in quicker if you keep their grain running in the same direction as the grain of the surrounding green area.**
6. **Tamp, top dress and water newly repaired areas.**
7. **If you have a problem with plugs not pulling try the following:**
  - a. **Twist plugger slightly back and forth before pulling each plug.**
  - b. **Tap plug grabbers in the cutting blade slightly inward.**
  - c. **When sharpening cutting blade, keep bevel on the inside.**
  - d. **If the plugs pull out of the damaged area, but not from a nursery area, a sod cutter set to 2 or 3 inches will undercut a strip of sod to pull the plugs from.**

### **LIMITED WARRANTY OF TURF-TEC INTERNATIONAL PRODUCTS**

Turfgrass Products Corporation - dba - Turf-Tec International ("Seller") warrants to the final purchaser, that all Turf-Tec International tools will be free from defects in material or workmanship for a period of one year from date of purchase. SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the repair or replacement of parts, without charge, which are defective in material or workmanship and which have not been misused, carelessly handled, or improperly repaired by persons other than Turf-Tec International. To make a claim under this Limited Warranty, you must return the complete tool, transportation prepaid, to Turf-Tec International after contacting Turf-Tec International and receiving a return authorization number. Please include a dated proof of purchase with your tool.

ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT.

### **Hold Harmless Agreement**

The seller shall protect, defend, indemnify and hold the purchaser and their respective assigns and their attorneys, accountants, employees, officers and directors harmless from and against all losses, costs, liabilities, claims, damages and expenses of every kind and character, as incurred, resulting from or relating to or arising out of the inaccuracy of results, injury of user, injury of sports participant, turfgrass loss, warranty, covenant or any agreement made by the seller in this agreement.