

# Turf-Tec International



## Turf-Tec Tall Pocket Tubular Soil Sampler Stainless Steel - 1/2 inch Diameter x 21 inches tall




Introducing the new Turf-Tec Tall Tubular Soil Sampler - 1/2 inch diameter sampler (13 mm). This tool that is the thinnest diameter tubular soil sampler in the business. It's entirely made of Stainless Steel. The unit removes a soil sample cores - 6 inches deep at a time. Simply remove from the ground, empty the soil and repeat the sampling process until the 21 inch depth is obtained.

Unit is an ideal for deep probing sand golf greens or sand based athletic fields all the way down to the drainage or gravel layer. Lower levels can also be tested for salt accumulation. Overall unit is 1/2 inch diameter X 21 inches tall.

Quickly inspect the soil for moisture content, root depth or any other physical characteristics. In addition, the Turf-Tec Pocket Tubular Soil Sampler - 1/2" Diameter is manufactured out of Stainless Steel so you can also use it for soil sample collection without the worry of contamination from iron, copper or zinc.

This tool is ideal for checking the bottom layers of sand based greens and athletic fields to examine if salts are accumulating above the gravel or drainage layer. It is also useful in inspecting water holding capacities of perched water tables.

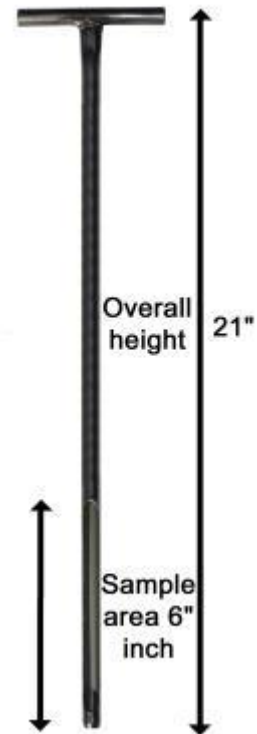

### Specifications

Material: 100% Stainless Steel	Diameter of sample tube: 1/2 inch, 13 mm
Overall Length: 21 inches, 53.3 cm	Viewable sample depth (Cut out area): 6 inches, 15.5 mm
Capable of taking samples down to 21 inches, 53.3 cm	Welded handle for stability
Handle Width: 4.0 inches, 10.2 mm	Weight: 6.7 oz, 192 grams

### Instructions

1. Insert Tubular Soil Sampler into soil by holding handle and pushing down into the soil.
2. Do not use excessive force to drive sampler into ground.
3. Twist sampler 1/2 turn and remove from ground.
4. Inspect soil sample.
5. Sampler should be cleaned with water and mild soap before storing.

**TSS4-S - Turf-Tec Tall Pocket Tubular Soil Sampler - 1/2" Diameter Stainless Steel**

**LIMITED WARRANTY OF TURF-TEC INTERNATIONAL PRODUCTS**

Turfgrass Products Corporation - dba - Turf-Tec International ("Seller") warrants to the final purchaser, that all Turf-Tec International tools will be free from defects in material or workmanship for a period of one year from date of purchase. SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the repair or replacement of parts, without charge, which are defective in material or workmanship and which have not been misused, carelessly handled, or improperly repaired by persons other than Turf-Tec International. To make a claim under this Limited Warranty, you must return the complete tool, transportation prepaid, to Turf-Tec International after contacting Turf-Tec International and receiving a return authorization number. Please include a dated proof of purchase with your tool.

ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT.

**Hold Harmless Agreement**

The seller shall protect, defend, indemnify and hold the purchaser and their respective assigns and their attorneys, accountants, employees, officers and directors harmless from and against all losses, costs, liabilities, claims, damages and expenses of every kind and character, as incurred, resulting from or relating to or arising out of the inaccuracy of results, injury of user, injury of sports participant, turfgrass loss, warranty, covenant or any agreement made by the seller in this agreement.