



## WEED1-M - Turf-Tec WeedAway Weed Removal Tool




The new Turf-Tec WeedAway is a heavy duty weed removal tool designed to twist weeds out of turfgrass areas. It is made of heavy duty gauge steel and also contains an ejection rod to remove the weed from the tool after popping the weed out of the ground.

The Turf-Tec WeedAway tool comes with two sets of heat treated spikes. One set uses three 1/4 inch steel spikes by three inches deep to twist weeds from fine turfgrass areas without bending over. The second set of spikes are 5/16 inch diameter by four inches deep and designed for optimum root removal of weeds on lawns and fairways.

Now, for the first time, a really heavy duty weed removal tool designed for the rugged maintenance of everyday use. This tool not only removes the weed, but also twists off the entire root system to prevent re-growth. The Turf-Tec WeedAway Tool also has replaceable heavy duty spikes to insure many years of service.


### Assembly Instructions

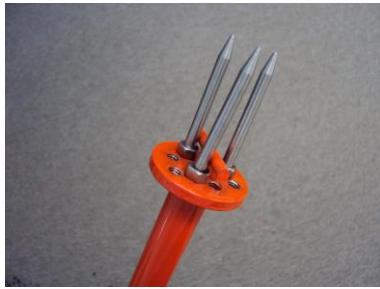


**For Small Size Weeds and Fine Turf Areas**  
Insert small spikes in centermost hole pattern with nuts on bottom **ONLY** and secure tightly into place.



**For Medium Size Weeds**  
Insert large spikes in middle hole pattern with nuts on bottom **ONLY** and secure tightly into place

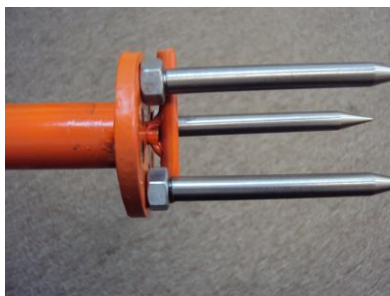

**For Large Size Weeds**  
Insert large spike in outermost hole pattern with nuts on bottom **ONLY** of spikes and secure tightly into place

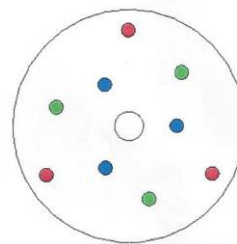

- YIELDS 1 1/2" DIAMETER HOLE
- YIELDS 1 1/4" DIAMETER HOLE
- YIELDS 1" DIAMETER HOLE



**Insert Turf-Tec WeedAway into weeds center**



**Twist handle to loosen roots from soil**



**Lift weed from soil**



**Push sown spring loaded ejection rod to remove weed from tool**

**Remove weeds on:**

- Golf courses
- Sports fields
- Playgrounds
- Home Lawns
- Excellent on Crabgrass, Goosegrass and all kinds of bunch type weeds
- No bending required for operation

**Specifications:**

- 39 inches tall
- Made of heavy gauge steel tubing
- Spikes are made of 1/4 inch steel and 3 inches long for optimal root removal
- Spikes are replaceable
- Painted with enamel paint for long life
- Vinyl finger grips for comfort

## **WEED1-M - Turf-Tec WeedAway Weed Removal Tool**

**TTWA10-M - Turf-Tec Weed away replacement spikes (Set of 3)**

**TTWA11-M - Turf-Tec Weed away replacement spikes (Set of 3)**

**LIMITED WARRANTY OF TURF-TEC INTERNATIONAL PRODUCTS**

Turfgrass Products Corporation - dba - Turf-Tec International ("Seller") warrants to the final purchaser, that all Turf-Tec International tools will be free from defects in material or workmanship for a period of one year from date of purchase. SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the repair or replacement of parts, without charge, which are defective in material or workmanship and which have not been misused, carelessly handled, or improperly repaired by persons other than Turf-Tec International. To make a claim under this Limited Warranty, you must return the complete tool, transportation prepaid, to Turf-Tec International after contacting Turf-Tec International and receiving a return authorization number. Please include a dated proof of purchase with your tool.

ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT.

**Hold Harmless Agreement**

The seller shall protect, defend, indemnify and hold the purchaser and their respective assigns and their attorneys, accountants, employees, officers and directors harmless from and against all losses, costs, liabilities, claims, damages and expenses of every kind and character, as incurred, resulting from or relating to or arising out of the inaccuracy of results, injury of user, injury of sports participant, turfgrass loss, warranty, covenant or any agreement made by the seller in this agreement.