

Irrigation Pressure Tester



**Reads
3-160 PSI
(0.2-11 Bar)**

**Digital
Test
Gauge**

• Accurately Check Nozzle Pressure Where It Counts

**± 2%
ACCURACY**

Features:

- Reliable pitot tube design
- Find nozzle & piping problems quickly
- Works with a wide variety of nozzles and sprinkler heads
- Includes battery with 5 year life
- For test gauge use only NOT for continuous use

Range & Units	Resolution	Accuracy
3.0 - 160.0 PSI	.5 PSI	± 2% or ± 1 PSI
0.20 - 11.00 Bar	0.05 Bar	± 2% or ± .07 Bar
20 - 1100 kPa	5 kPa	± 2% or ± 7 kPa


1 YEAR WARRANTY: This product is warranted to be free from defects in materials or workmanship for one (1) year from the date of purchase.

**innoquest
inc.**

910 Hobe Road
Woodstock, IL 60098 USA
815-337-8555 • www.innoquestinc.com

Assembled in USA with
China and US parts

Innoquest Item #28140

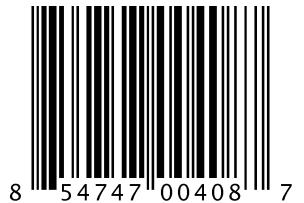

© 2014 Innoquest Inc. USA P/N 28520 Rev. 0

Gauge Operation




LCD Shows Pressure & Unit of Measure

Press **ON** button to turn gauge on. NOTE gauge **MUST** be turned on before applying pressure because it captures zero pressure at power on. The gauge turns off automatically if no pressure is applied within 15 seconds. The only way to turn the unit **OFF** is to wait 15 seconds for auto-off feature.

Changing Pressure Units: While the gauge is on hold the **ON** button until the display start flashing. Then while the display is flashing press and release the ON button to select the desired unit of measure. Once selected wait until flashing stops to use gauge.

Battery Replacement

Approx. Battery Life is 5 Years so the need for battery replacement should be very limited (Depends on usage)

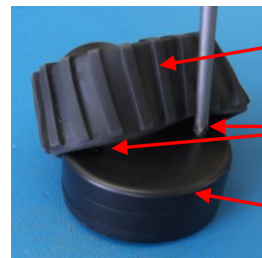

1. Remove protective rubber boot.
2. Remove both screws in back of case.
3. Remove and save sealing tape around outside of case.



4. Separate case to expose battery.
5. Slide battery out and replace with new **CR2032** 3 volt Lithium Coin Cell